


ARC125 USB driver installation manual:

Before you can use ARC125 you must install either the BC125AT or UBC125XLT driver. The exact model is printed on the front of the scanner. As a general rule the BC125AT is the US/Canada model and the UBC125XLT is the European model.


First install ARC125. After installing the software reboot your PC. Do not plug the USB cable in yet!

After rebooting the PC plug the USB cable in the PC and the scanner. Windows will recognize the new device. DO NOT let Windows automatically install drivers. Specially in Windows 8 the automatic driver installation must be disabled.


First open the windows control panel:

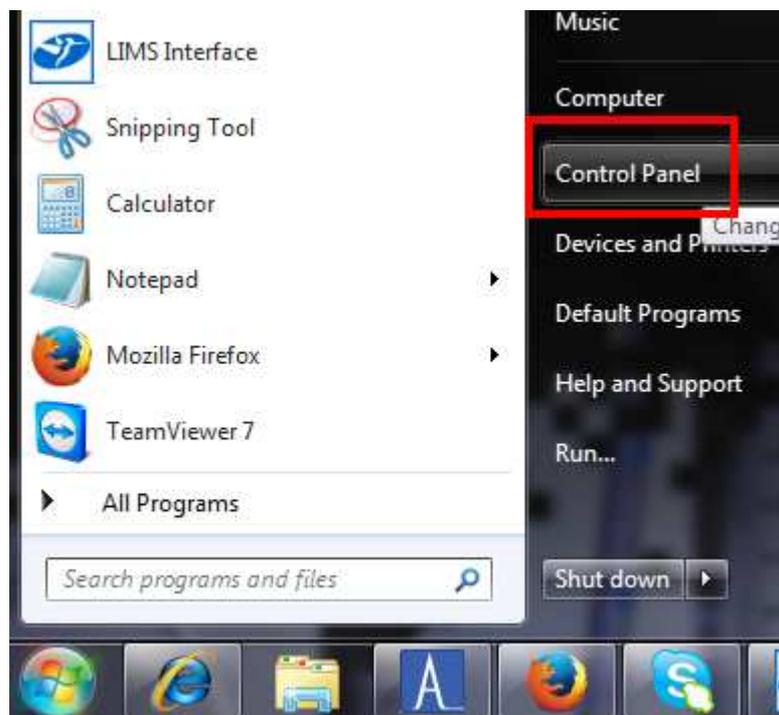

Depending on your preference the control panel looks like:

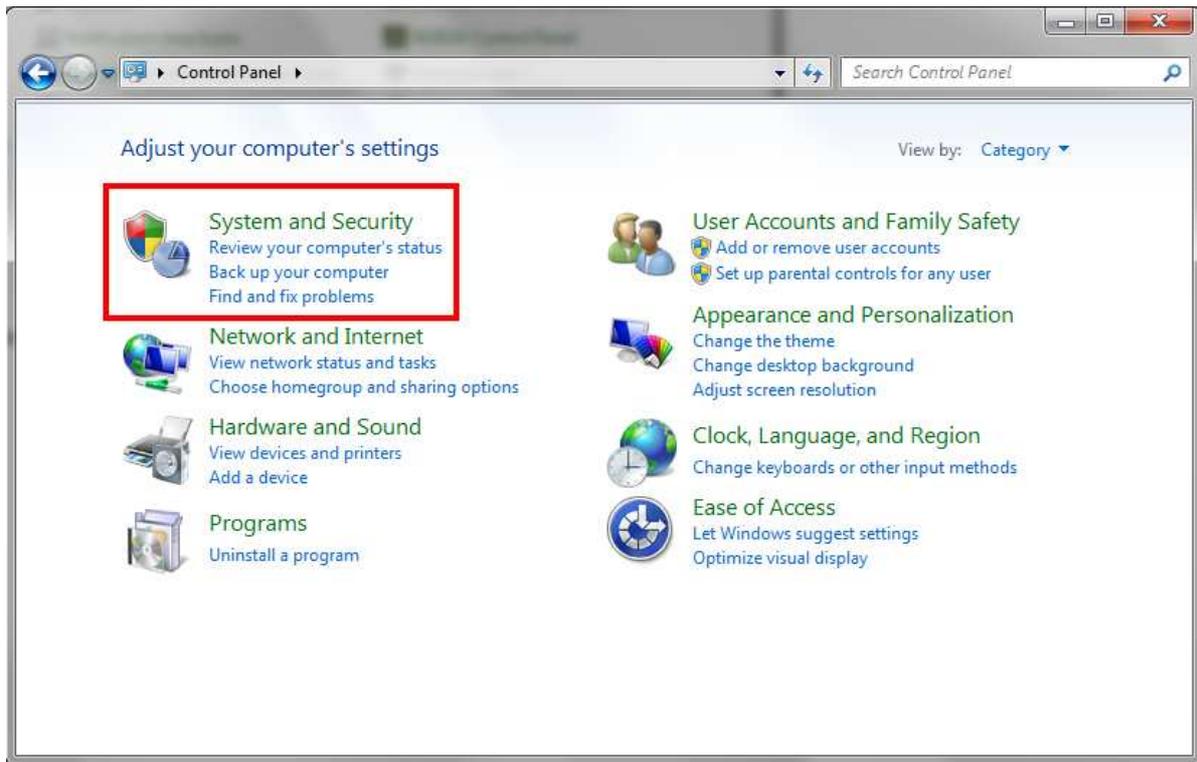


or

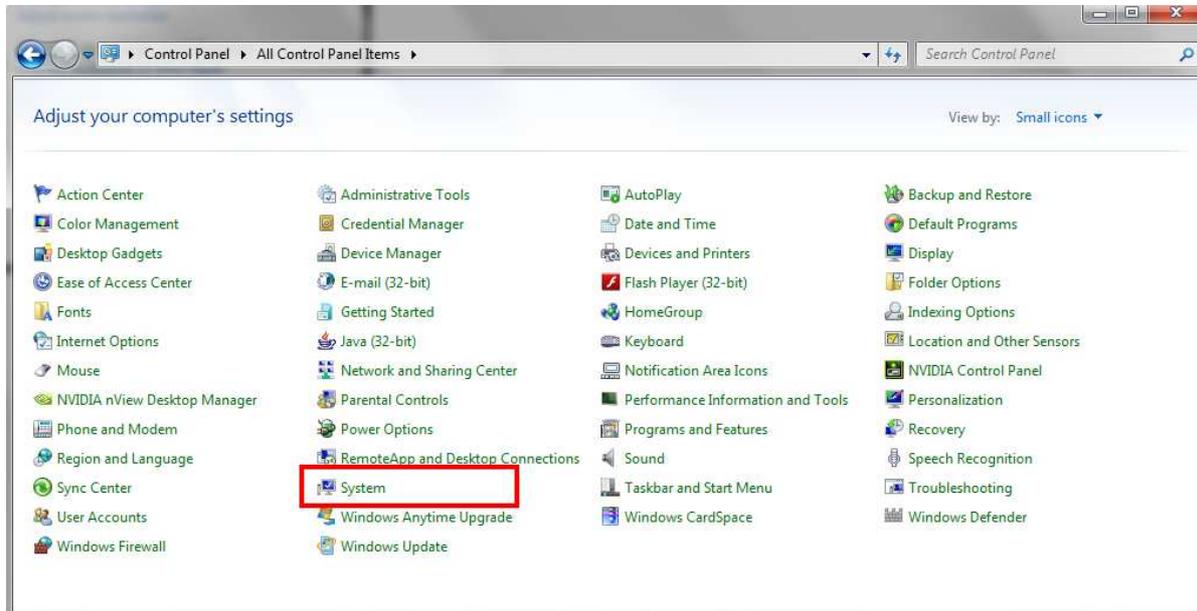


Click on the red marked item.


In the next window select Device Manager:

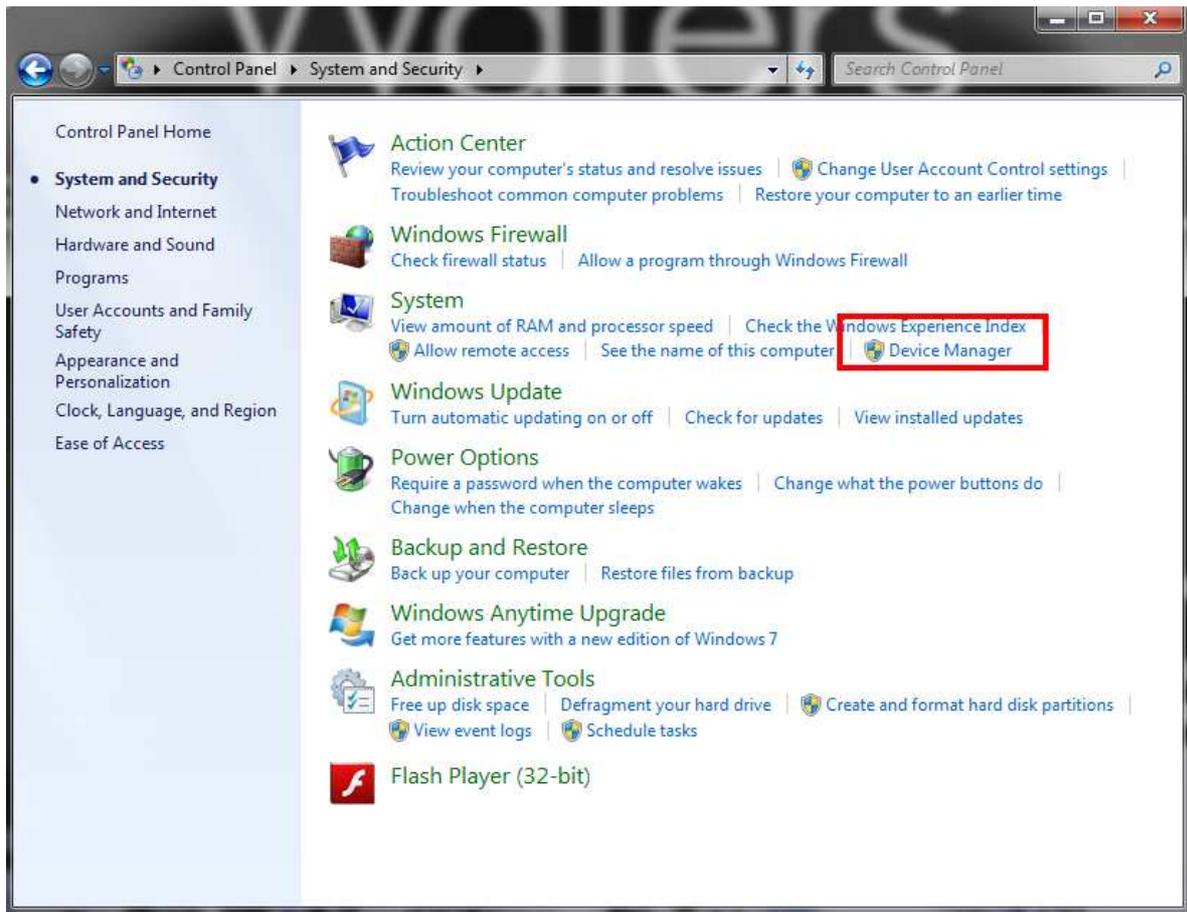


Check for any yellow exclamation marks: (usually in the Other Devices section):

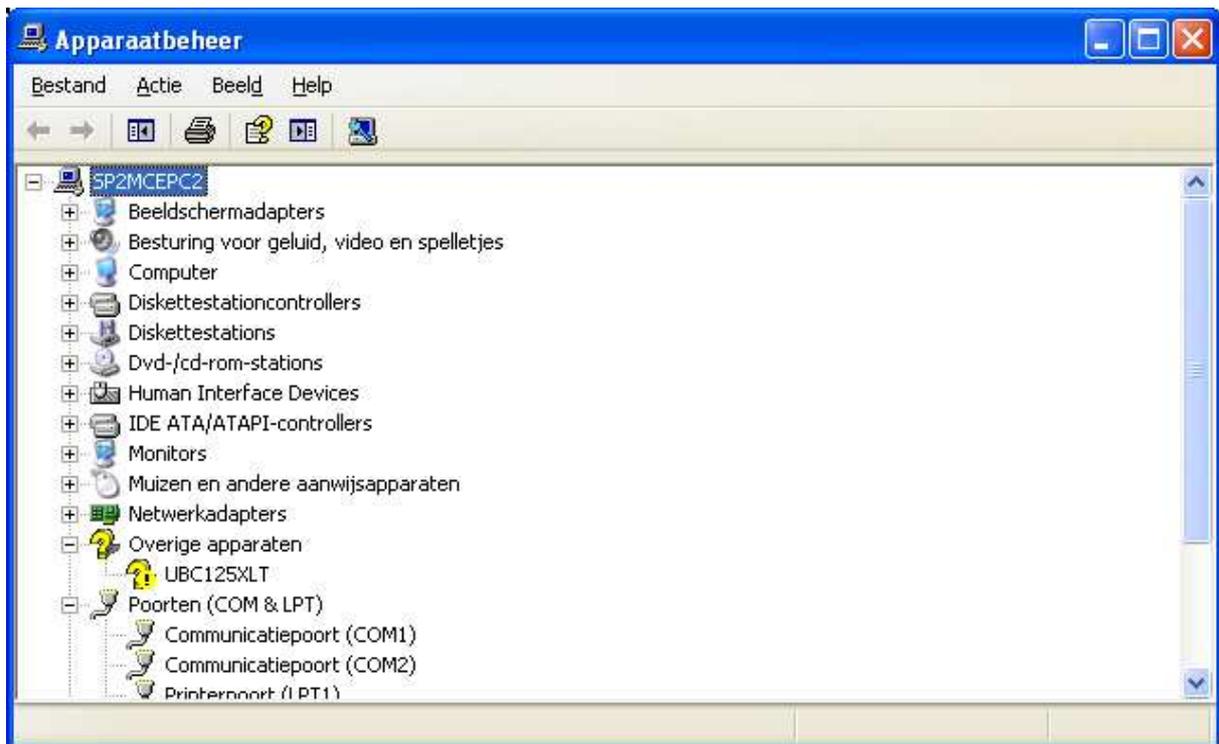

Click on the yellow exclamation marker and do a right mouse click. Click Update Driver Software...

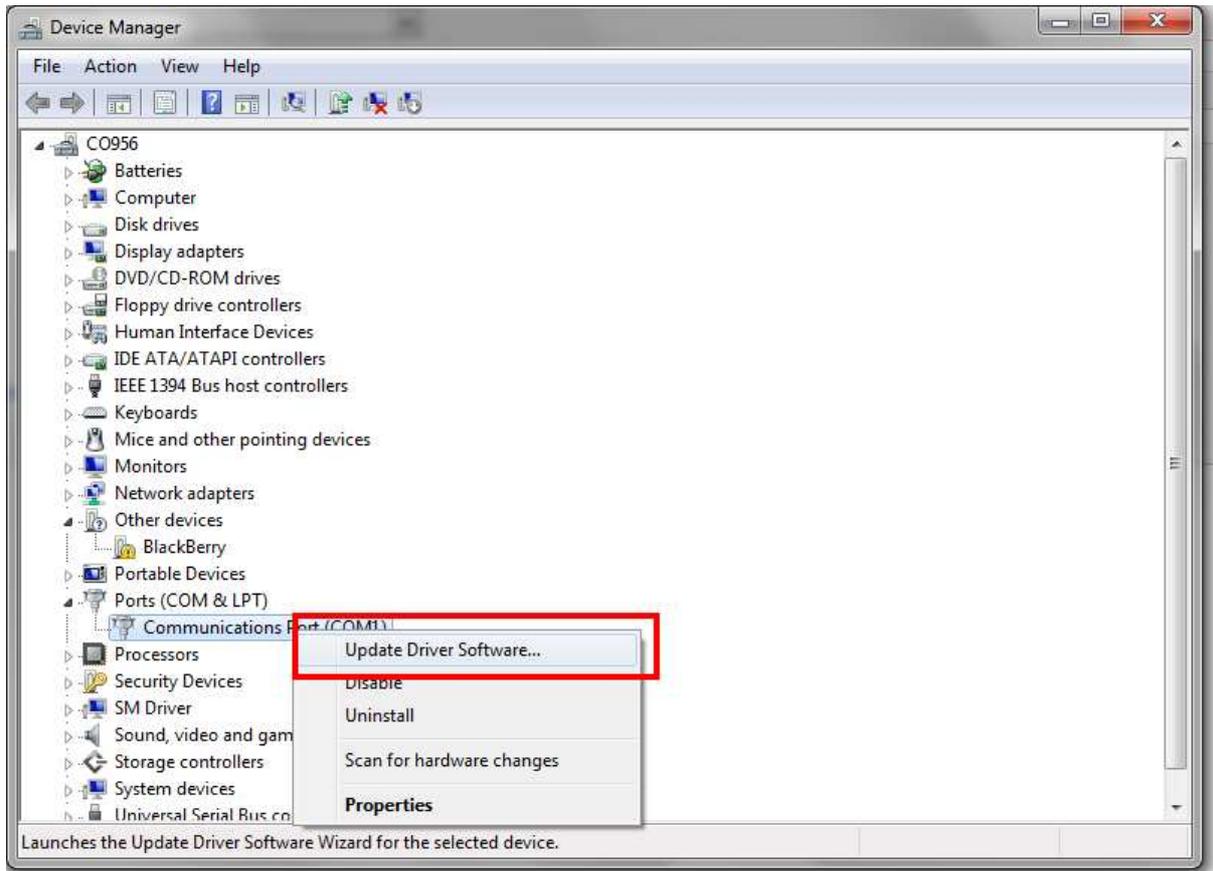

Next select Browse My computer for driver software:

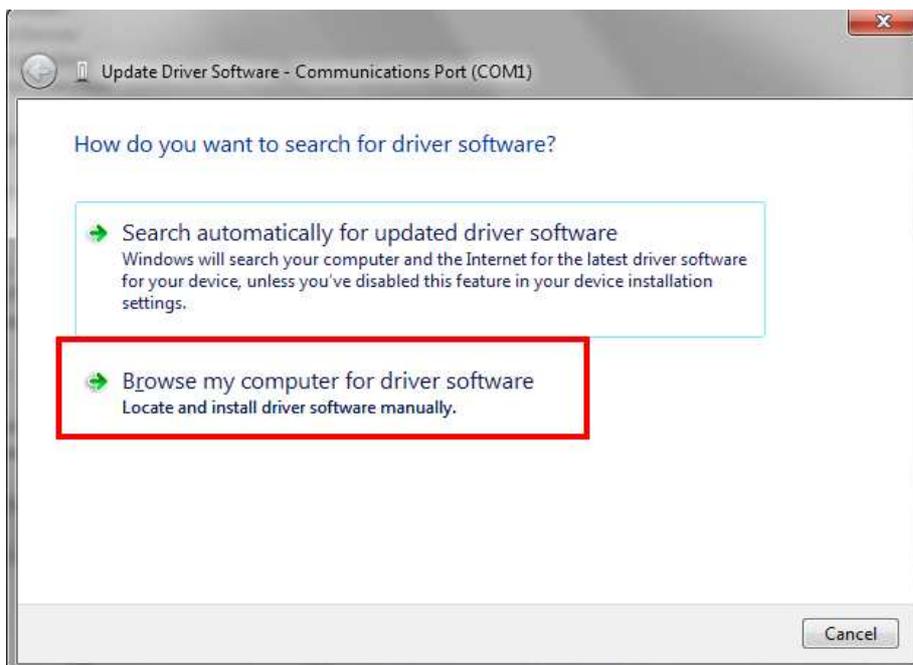

Now browser to the ARC125 folder C:\PROGRAM FILES\BUTEL\ARC125\DRIVERS
And open either the BC125 or UBS125XLT driver folder depending on your model.



Next click on the inf file. This will install the correct software.
Close all windows and reboot the PC. The driver is now installed and ARC125 is now ready for use.

Alternative way to open Windows device manager:

From the Windows menu select run and type:

Mmc devmgmt.msc , this will open the windows device manager.

